


[HOW TO]

ADJUST ROOM TEMPERATURE

WITH BUILDING AUTOMATION SYSTEM ZONE SENSORS

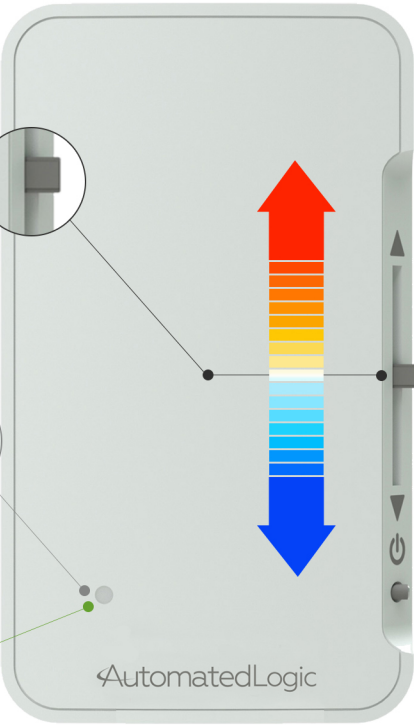

SLIDE BAR •
Adjust the temperature of the room with the SLIDE BAR.

LIGHT OFF •
HVAC is in "Unoccupied" mode*

LIGHT ON •
HVAC is in "Occupied" mode*

INCREASE
Increase the temperature by sliding the SLIDE BAR UP to make the room WARMER.

DECREASE
Decrease the temperature by sliding the SLIDE BAR DOWN to make the room COOLER.

OVERRIDE BUTTON
Manually override the unoccupied mode/schedule of a single room or area.

With every press of the button, you can add an extra thirty minutes of occupied temperature.**

* HVAC units are never completely turned off—they can be set to either "Occupied" or "Unoccupied" mode. In "Unoccupied" mode, the temperature is adjusted to conserve energy when no one is present.

** If light DOES NOT come on, contact facilities for repairs.